



USER'S MANUAL v2.1



for TELX PABX Models 3x8

Before Operation

◆◆ What Kind of Telephones You Can Use With Our PBX

Can use any brand Single Line Telephone Set to program and work with it

◆◆ Attention

Make Sure the Power Supply is 220VAC or 110VAC Before Connection.

WARNING

CHECK THE POWER SUPPLY OF THE PBX BEFORE CONNECTION, MAKE SURE IT IS SAME AS LOCAL VOLTAGE

DO NOT PLUG IN OR PLUG OUT THE ADD-ON CARD OR OTHER EQUIPMENT WHEN PBX IS POWER ON.

MAKE SURE TO CONNECT WITH GROUND FOR LIGHTNING PROTECTION

IF PBX FAILS PLEASE DO NOT MOVE OR TOUCH ANY COMPONENTS IN PBX JUST CONTACT YOUR LOCAL DEALER FOR REPAIR

DO NOT EXPOSE THE SYSTEM TO RAIN OR MOISTURE SITUATION.


1.1 Make Calls


1.1.1 Basic Calling


- Intercom Call
- Call Operator
- Call Outside

◆◆ Intercom Calling

The extension call to other extension.

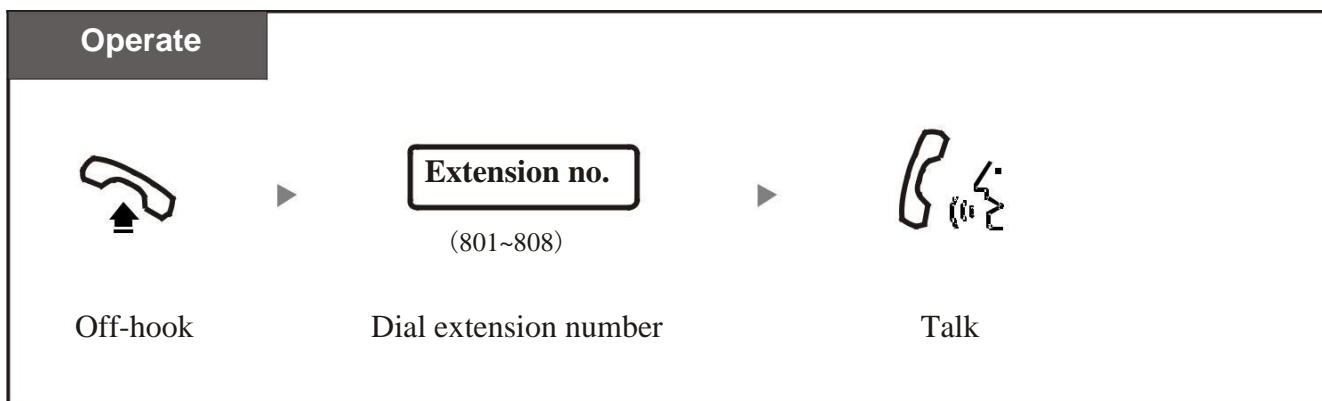


 Extension no. : It means original extension numbers 801,802,803 ~808 ,or the new numbers that you have modified;

 In system factory status, User pickup handset and hear the intercom dialing tone. If dial "0", then it will route to external dialing mode, user can still use "*" to switch to intercom mode.

1.1 Make Calls

◆◆ Call Outside

The extension call to outside telephone number .

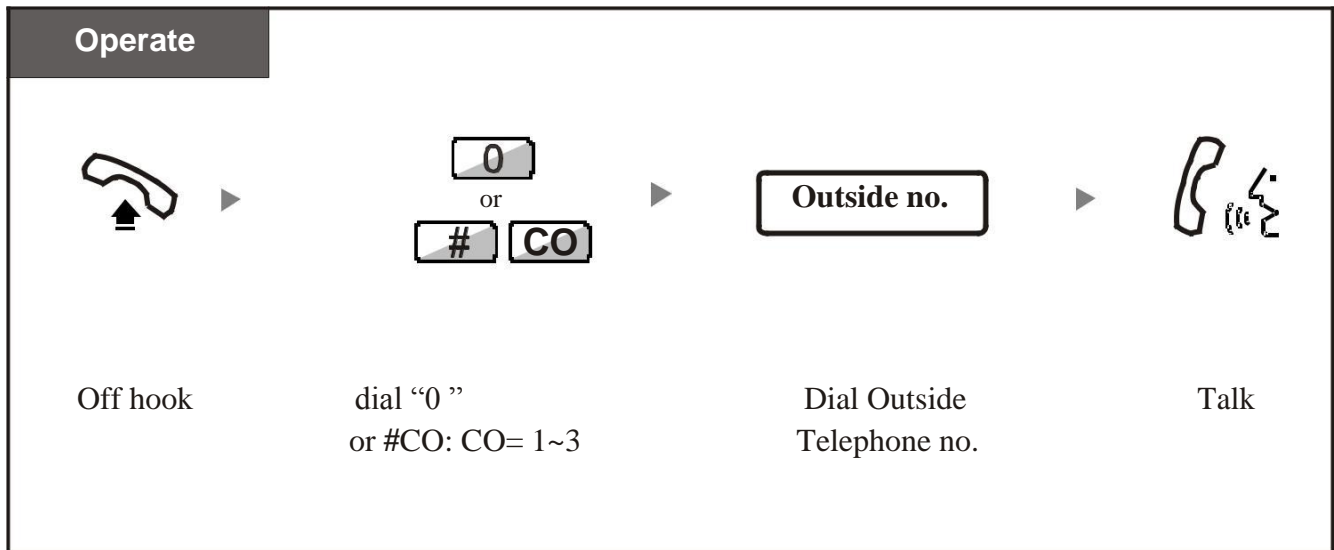


Dial "0" : System will auto-select any idle free Outside Line;
Dial #01~#03: System will directly select desired Outside Lines 1~3;
Outside Telephone number.: The number from Telecom operator.

1.1 Make Calls

1.1.2 Last Number Redial

◆◆ Last Number Redial

You can dial the last number again by quickly press Re-dial button.

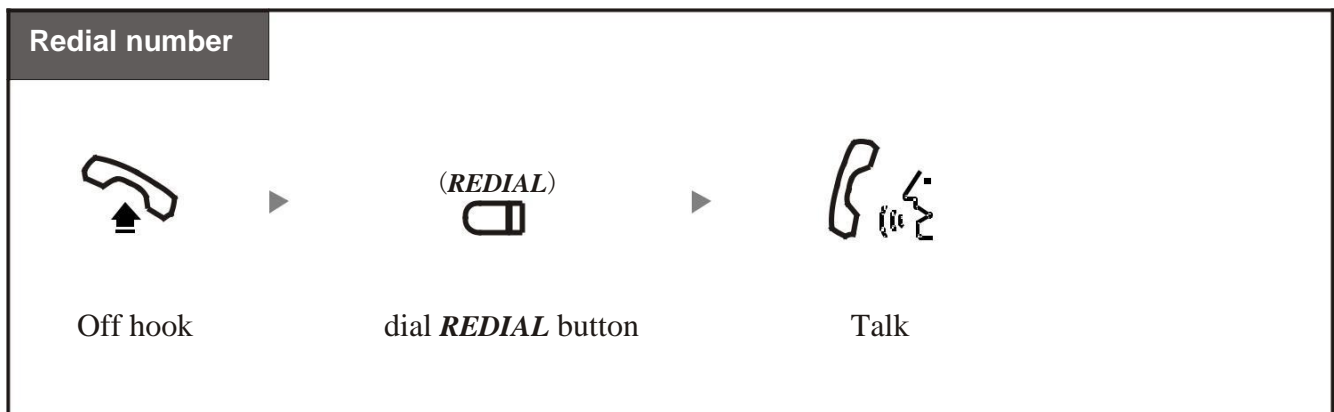


1.3 During a Conversation

1.3.1 Call Transfer

◆◆ Call Transfer

You can transfer the conversation to other extension party.

-Do not hang up the handset while transferring to another extension or else call will be ended.

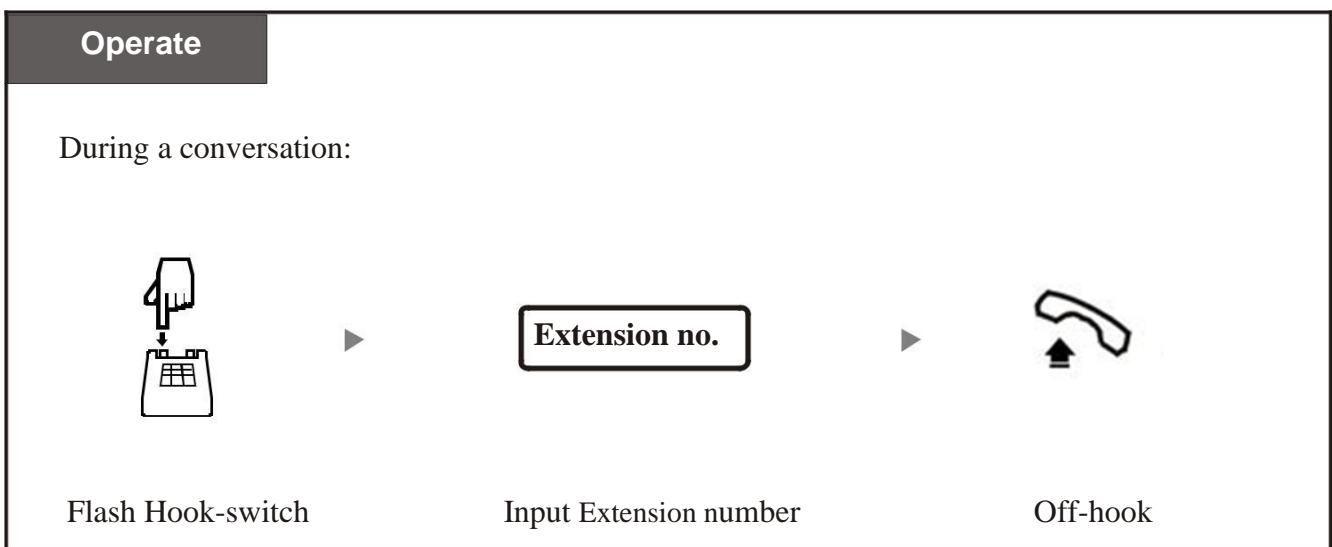


1.2 During a Conversation

1.3.2 Multi-party Conference Call

◆◆ To Call For a Conference

During a 2-party conversation (1CO +1EXT), you can add a third party join together for a 3-party conference call.

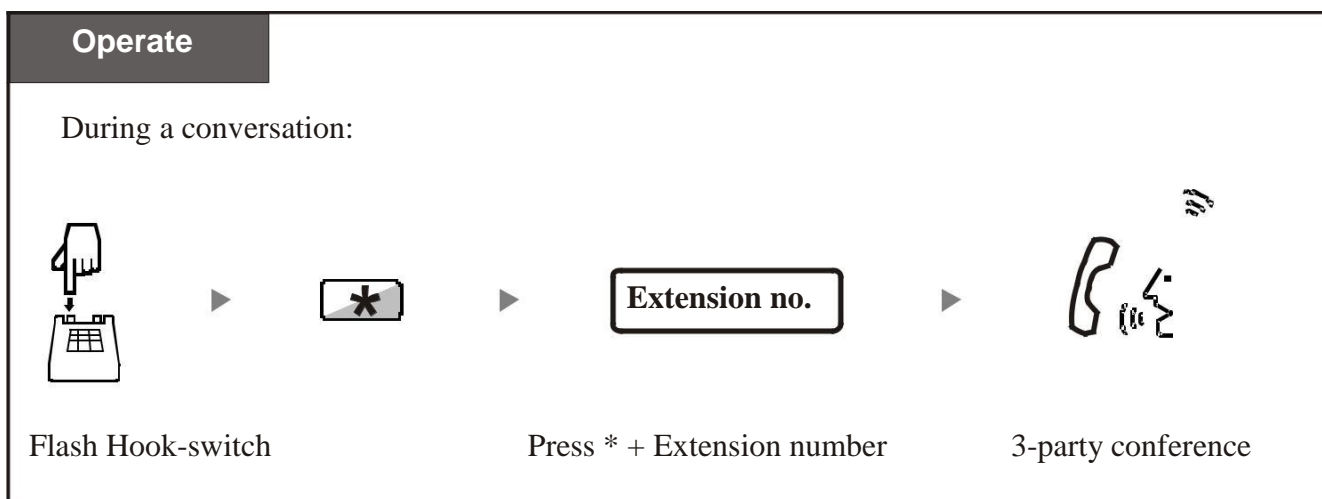


1.4 System Program

1.4.1 Modify System Program Password

Steps

Press Button

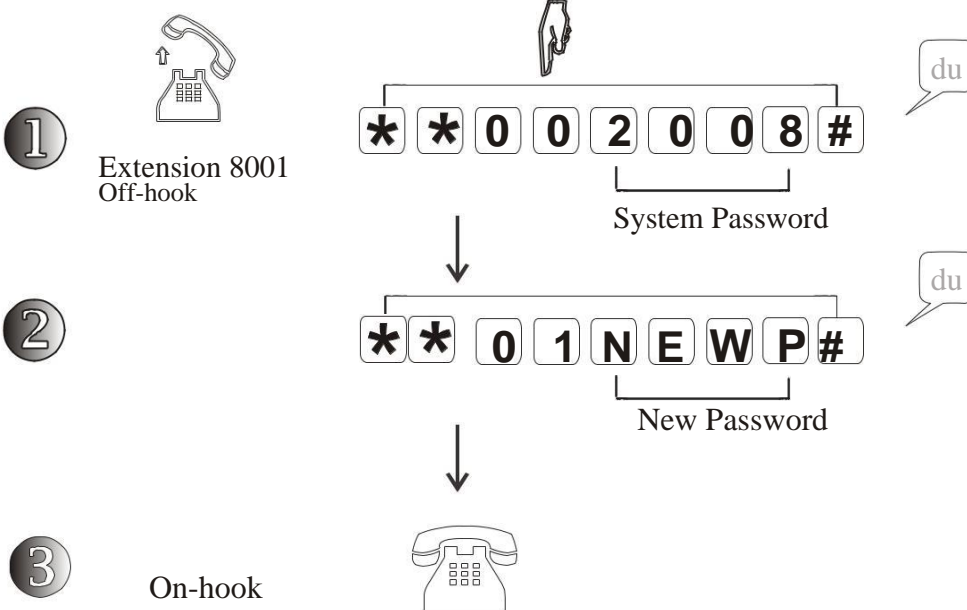

▶▶ **2008:** It is the original 4-digit password for System Program;
NEWP: It refer to any 4-digit new password that you can set;


▶▶ If user forget the password which programmed, please ask help from our dealer or factory directly .

1.4 System Program

1.4.2 Play Music on Hold

Steps

Press Button

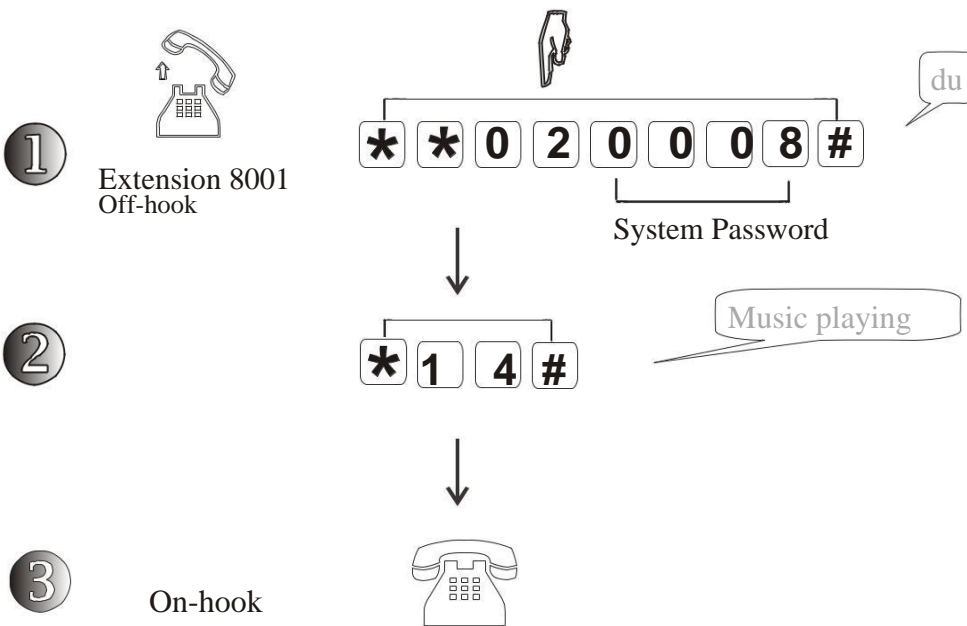


- ▶▶ **2008:** It is the original 4-digit password for System Program;
- ▶▶ **Music:** the built-in music can not be changed ,it will be played when Caller is transferring;

1.4 System Program

1.4.3 Return PBX to Factory Setting

Steps

Press Button

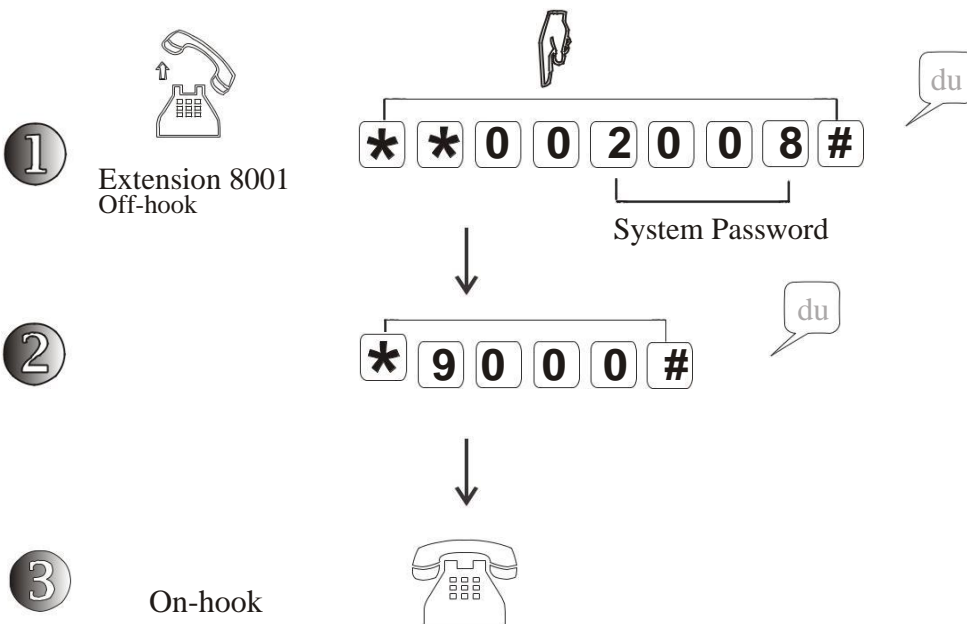

▶▶ User can re-set system to factory after system work for some time;


▶▶ This code do not re-set Extension number, Outside Line port switch status and Call logs for PC.

2.1 Auto or Operator Attendant Program

2.1.1 Record Auto-attendant Message

Steps

Press Button

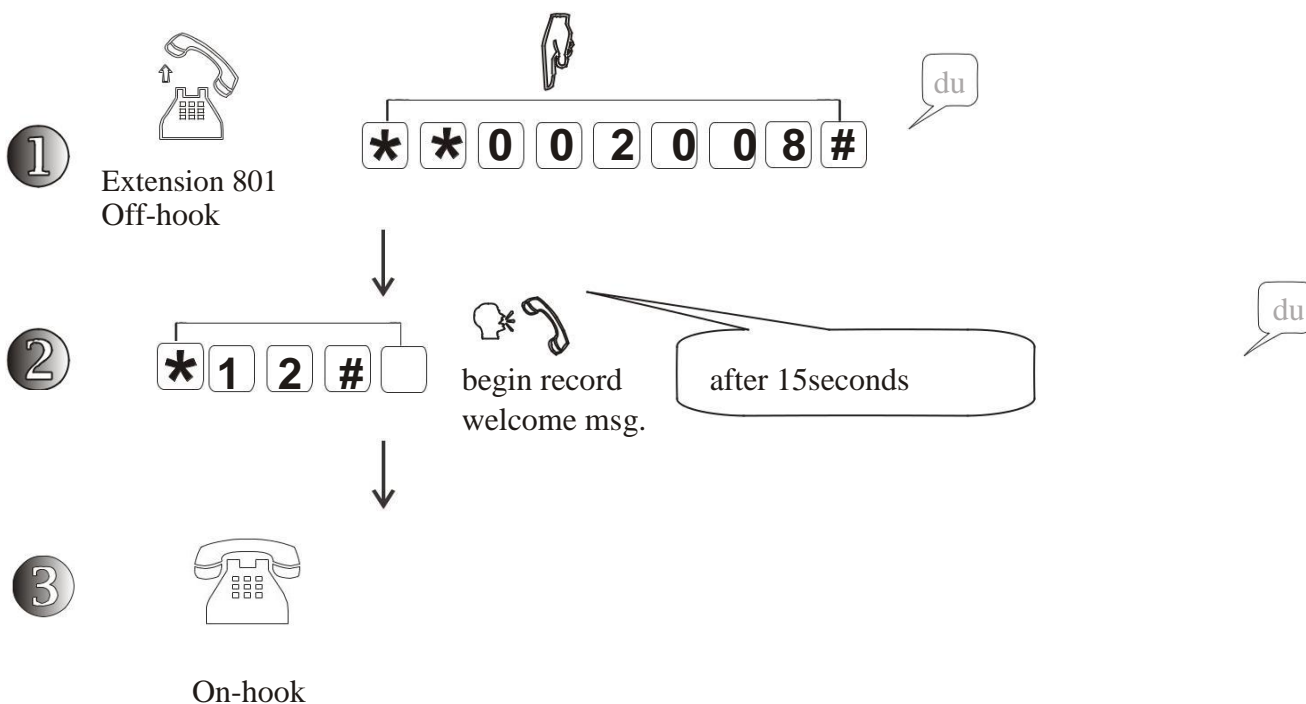

▶▶ User can check the OGM record result by this feature

Setting Code: * 1 3 #


▶▶

2.1 Auto or Operator Attendant Program

2.1.2 Set Outside Lines in Auto-attendant Mode

Steps

Press Button

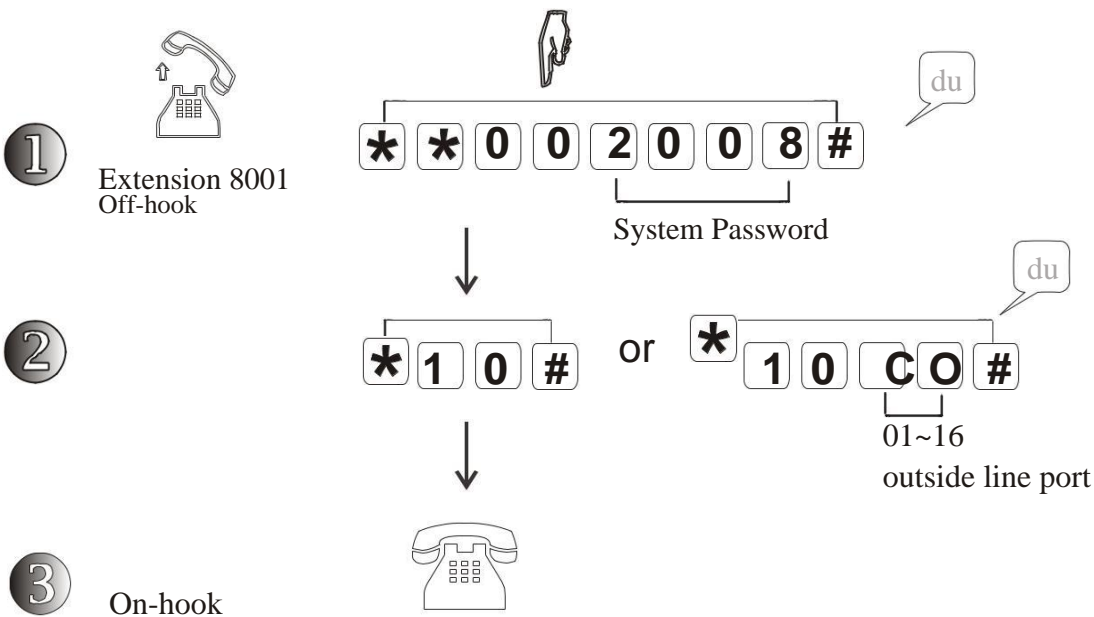

- ▶▶ ***10#**: This code is to set All Outside Lines in Auto-attendant mode;
- ▶▶ ***10CO#**: This code is to set specific outside line in Auto-attendant mode; CO = 01,02,03,04,05...14,15,16, means outside line port.


- ▶▶ After setting, all incoming call will be routed automatically by PBX message, the Caller can dial to the desired extension directly without consultation with Operator or reception.

2.1 Auto or Operator Attendant Program

2.1.3 Set Outside Lines in Operator-attendant Mode

Steps

Press Button

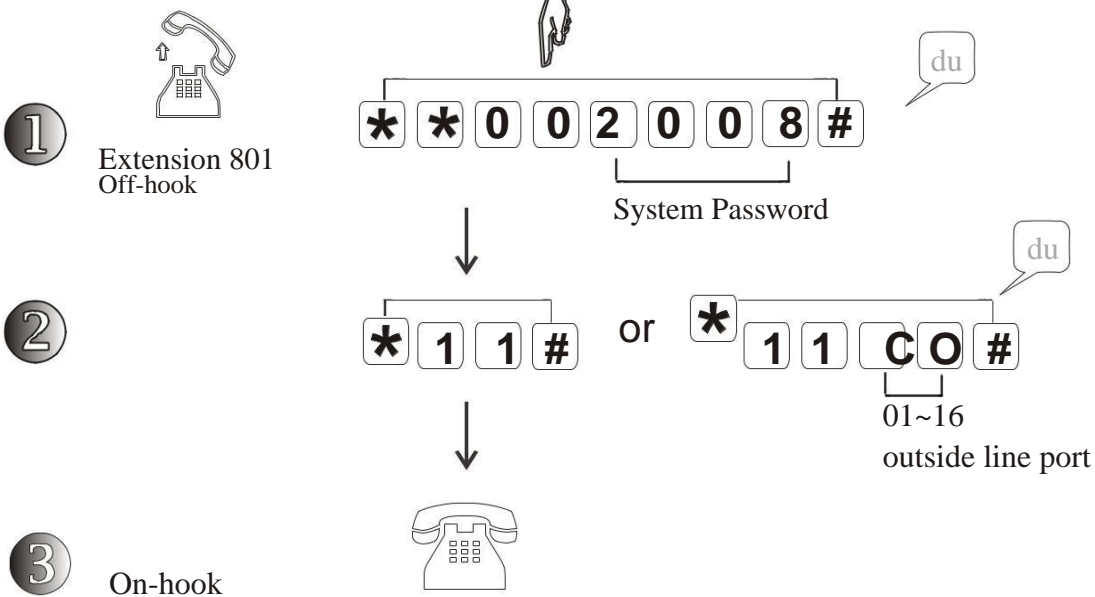


- ▶▶ “*11#”: This code is to set All Outside Lines in Operator-attendant mode;
- ▶▶ “*11CO#”: This code is to set specific outside line in Operator-attendant mode; CO = 01,02,03,04,05...14,15,16,means outside line port.
- ▶▶ After setting, the incoming calls will be received and routed by Operator or reception by hand manually.


2.1 Outside Line Program

2.1.4 Enable/Disable Outside Line Ports

Steps

Press Button

1 
Extension 801
Off-hook

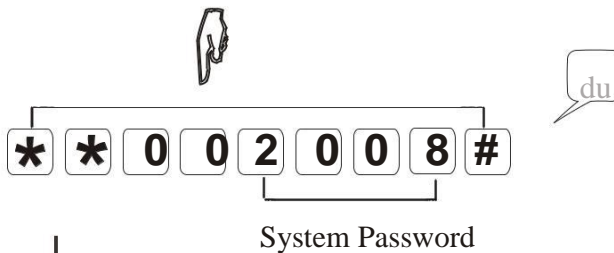

2 
1st 8 port CO card



M=1,2,3 the desire port which user want to enable

3 On-hook 


4

3.1 Extension Program

3.1.1 Extension Flexible Numbering

Steps

Press Button

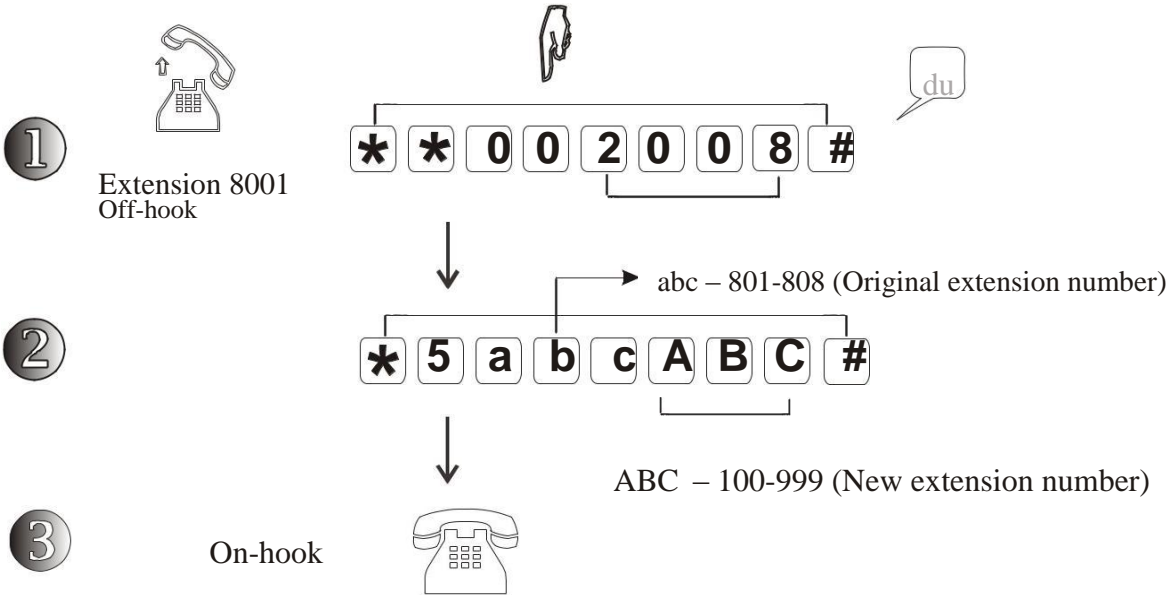

- ▶▶ **Reset extension number to factory:** “*5000#”
- ▶▶ **Clear all extension number:** “*5100#”


- ▶▶ Extension number can not be the same , and new extension number is selectable among “10” ~ “8999” ,but can not be 1-digit like “1,2,3” and start with “0” or “9” like 008,900.

3.1 Extension Program

3.1.2 Call Duration Control

Steps

Press Button

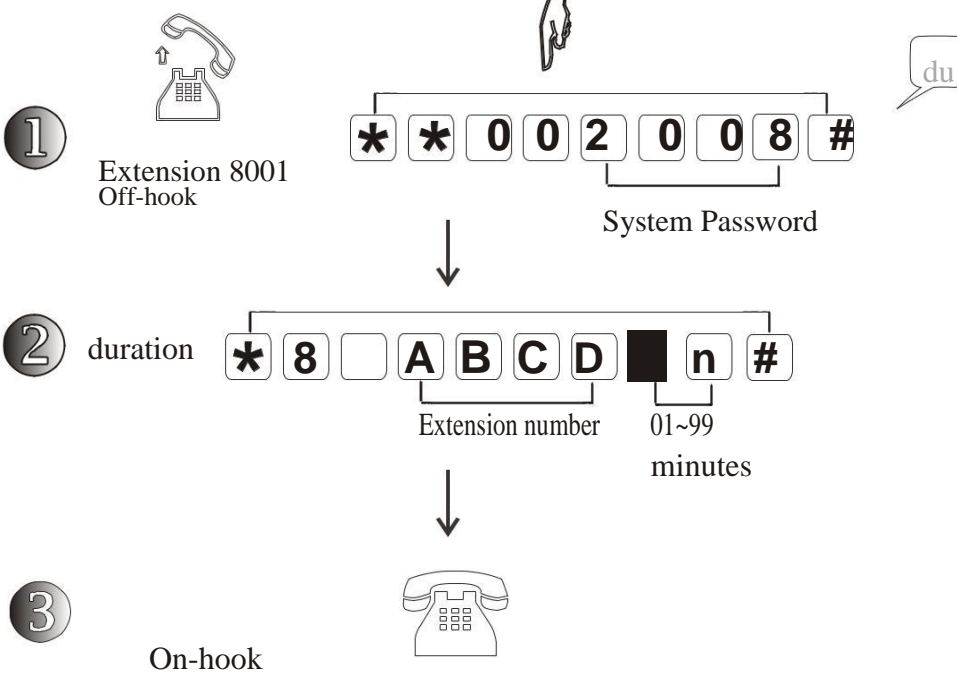


Description: Allow to control extension users to do not occupy the conversation and telephone line for long time.

3.1 Extension Program

3.1.3 Call Duration Control - Cancel

Steps

Press Button

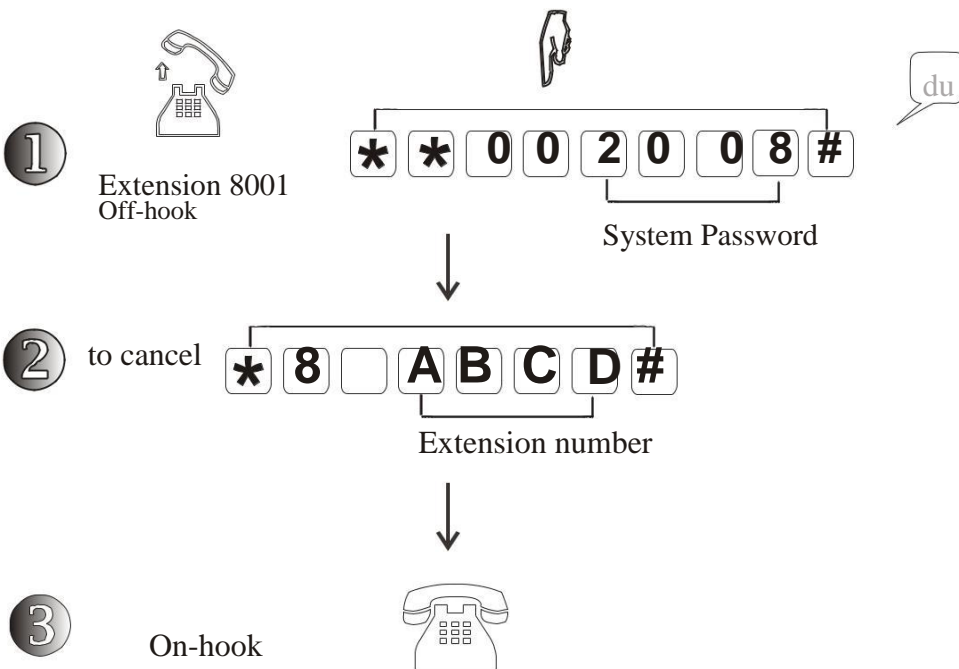

System Program List

No	Command	Function
1	**00 2008#	Login in system program mode by using password "2008"
2	*01 ABCD#	Change factory password to new "ABCD"
3	*4M	Enable CO Line Port, (M = 1, 2, 3, 4)
4	*31N abc#	Set CO Line "N" as exclusive line of extension "abc"
5	*32M abc#	Set extension "abc" can only use CO Line "M"
6	*2M abc#	Set incoming line "M" ringing extension "abc"
7	*11#	Set system in Operator Mode
8	*10#	Set system in Auto- attendant mode
9	*10m#	Set line "m" in Auto-attendant mode
10	*12#	OGM/ DISA Recording
11	*13#	To play OGM recording in phone set
12	*14#	To play on-hold music
13	*15 abc#	Set 1 st ringing Operator extension "abc"
14	*16 abc#	Set 2nd ringing Operator extension "abc"
15	*5abc ABC#	Change old extension "abc" to new extension number "ABC"
16	*5000#	Restore extension number
17	*7abc n #	Set extension "abc" dial-out mode (n=0,1)
18	*7000#	Restore all extension dial "0" out
19	*8abc MN#	Set extension "abc" call time control for only "MN" minutes
20	*9000#	Reset system to factory status